



# **OPERATION MANUAL**

## **Pedi Lounger™**

### **MULTI-PURPOSE**

### **Pedicure & Facial Chair**



Shown with optional Pivot Perfect Arms and optional Pedi Roll-up Foot Bath

**FOR COMMERCIAL USE ONLY**

(800) 358-8292 (760) 597-2155  
Fax: (760) 599-7374

**OPERATION MANUAL**  
**Living Earth Crafts**  
**Pedi Lounger**

Your new Living Earth Crafts Pedi Lounger is an electronically operated table. This manual will assist you in operating and caring for your new chair.

**Section 1: IMPORTANT SAFETY INSTRUCTIONS ..... page 2-4**

**Section 2: OPERATING INSTRUCTIONS .....page 5-10**

**Section 3: MAINTENANCE.....page 11**

**Section 4: TROUBLE SHOOTING .....page 12**

**Section 5: TECHNICAL PROBLEMS .....page 13**

**Section 6: WARRANTY .....page 14**

**Section 7: SPECIFICATIONS.....page 15**



**Section 1  
PEDI LOUNGER**

**IMPORTANT SAFETY INSTRUCTIONS**  
**FOR COMMERCIAL USE ONLY**

When using an electrical furnishing, basic precautions should always be followed, including the following:

Read all instructions before using the PEDI LOUNGER.

**DANGER-** To reduce the risk of electrical shock:

- 1) Always unplug this furnishing from the electrical outlet before cleaning.
- WARNING-** To reduce the risk of burns, fire, electric shock, or injury to persons:
  1. Unplug from outlet before putting on or taking off parts.
  2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
  3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
  4. Never use this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
  5. Keep the cord away from heated surfaces.
  6. Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair and the like.
  7. Never drop or insert any object into any opening.
  8. Do not use outdoors.
  9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
  10. To disconnect, turn all controls to the off position, then remove plug from outlet.
11. **WARNING, MOVABLE PARTS-** Risk of Injury- Keep children away from extended Table, angled Table, Back Support and/or Leg Support.
12. **CAUTION:** To reduce the risk of electrical shock, this furnishing has a grounded plug. If it does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way. See page 4.
13. Make certain that the cord and plug are maintained in good condition and are not allowed to become damaged while in use. Avoid positioning the cord in the traffic lane and it is always kept out of the way. Take this furnishing out of service immediately if the cord or plug becomes damaged in any way.
14. If this furnishing is not in use, the cord needs to be rolled up and stored out of the way to avoid damage.
15. Do not attempt to repair this furnishing. All repairs must be performed by an authorized service representative.

**SAVE THESE INSTRUCTIONS**



**Section 1 Continued**

**IMPORTANT SAFETY INSTRUCTIONS**  
**Pedi Lounger**

**CAUTION!**

When lowering any section of the table, make sure that no supplies or any part of yours or your client's body is between the top of your table and its base. This could result in injury, or could damage your table as well as the item. It is recommended that you always return your table top to the sitting position. By doing so, you will minimize the possibility of damage to your table by unequal weight distribution such as sitting on the leg section while raised.

When lowering any section, be sure there are no foreign obstacles underneath that could obstruct it from lowering completely. This could damage your table.

1. Maximum load limit for the back and leg section 100 lbs each.
2. Never set anything under the table frame.
3. Never operate your table on an uneven surface. Adjust the leveling feet so that your table is stable.
4. Never operate your table with unequally distributed weight such as sitting on the foot or head section while raising or lowering it.
5. Never raise the head or foot section with a client in the prone position (face down).
6. Never use or store your table in a wet or very humid environment. Water and excessive moisture can damage the wood cabinet and electrical components. Evidence of exposure to water or moisture will void your warranty.
7. If you have purchased the Flexible Armrest Option, never use the Armrests as handholds or body support mechanisms, especially when setting clients on or off the table.
8. Never attempt to use the foot or back lift section to support concentrated weight such as sitting or standing.

**SAVE THESE INSTRUCTIONS**




**Section 1 Continued**  
**IMPORTANT SAFETY INSTRUCTIONS**  
**Pedi Lounger**

**GROUNDING INSTRUCTIONS**

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**DANGER-** Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product-if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

In the USA - This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch (A) below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

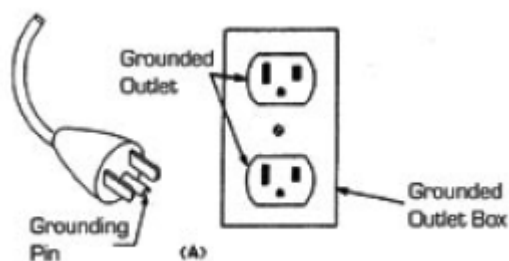

For countries utilizing 220 volt, this product will be manufactured for use on a nominal 220 volt circuit with typical plug configuration for country which it is intended to be used in. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

**SAVE THESE INSTRUCTIONS**



## Section 2

### OPERATING YOUR TABLE

#### Pedi Lounger

#### USE OF THE HAND CONTROL

The Arrows on the top row indicate “Up” or “Down” and will articulate the section of the table that is darkened in the image



The hand control will allow you to perform the following functions:

1. Raise or lower the back tilt independently. BACK TILT ARTICULATES BY TOUCHING THE ICONS ON THE TOP ROW.
2. Adjust the tilt angle of the chair to position your client in a zero gravity position to flat position. TILT ANGLE ARTICULATES BY TOUCHING THE ICONS IN THE SECOND ROW
3. Raise or lower the Calf Section. CALF SECTION ADJUSTS BY TOUCHING THE ICONS IN THE THIRD ROW

**SAVE THESE INSTRUCTIONS**

**Section 2 Continued**  
**OPERATING YOUR TABLE**  
**Pedi Lounger**

**POSITIONING OF YOUR TABLE**



**Pedi Lounger shown in sitting position.  
Use for pedicure applications.**

1. Row 1 on hand control: Position back tilt in full upright position. Adjust for comfort.
2. Row 3 on hand control: Position leg section in down position according to customer height. Note that the leg section is typically adjusted to position the section behind the sitting section. Adjust for comfort.
3. Row 2 on hand control: Adjust the angle of the seat for comfort.



**Pedi Lounger shown in zero gravity position.  
Use for relaxation or facials.**

1. Row 1 on hand control: Position back tilt in reclined position for comfort.
2. Row 3 on hand control: Lift leg section to remove strain off lower back.
3. Row 2 on hand control: Adjust the angle of the seat for comfort, moving to a zero gravity position.



**Pedi Lounger shown in flat position.  
Use for mini massage or face down treatments.**

1. Row 1 on hand control: Position back tilt to flat position by pressing the down button.
2. Row 3 on hand control: Lift leg section to flat position by pressing the up button.
3. Row 2 on hand control: Adjust the angle to flat.
4. There is no height adjustment.

**SAVE THESE INSTRUCTIONS**



LIVING EARTH CRAFTS®

Operation manual – Pedi Lounger, 08.20.10 V1

08/26/10

## Section 2 - Continued OPERATING YOUR TABLE Pedi Lounger

### USE OF POWERPORT™ MANAGEMENT SYSTEM



The PowerPort Management System on your table(s) has been customized for the correct voltage and plug configuration for your country.

Volt

Plug #

Country



PowerPort Management allows you to power additional equipment right from the table with recessed built-in outlets. Eliminates unsightly power cord clutter and helps to reduce possible trip hazard zones caused by multiple cords.



You will notice 2 plugs extending out from the base of the Pedi Lounger.

1. The short cord should be plugged into the floor outlet and will activate the PowerPort Management. This does not have to be plugged in to operate your Pedi Lounger. If you do not have a floor outlet, then your PowerPort Management outlet will not be powered for use.
2. The longer cord can be plugged into the floor outlet, into the outlet found on your Pedi Lounger, or into a wall socket. This will power the Pedi Lounger.



US locations will have outlets which accept a grounded 3-prong plug; International locations will have a universal plug that accepts different plugs from around the world.

The maximum total draw from the PowerPort Management system should not exceed 10A.

**SAFETY PRECAUTIONS:** Take caution not to overload the circuit by following the maximum amperage noted on the sticker next to the outlet.

**SAVE THESE INSTRUCTIONS**



LIVING EARTH CRAFTS™

Operation manual – Pedi Lounger, 08.20.10 V1

08/26/10



**Section 2.A**  
**OPERATING YOUR TABLE**  
**Pedi Lounger – Optional Features**  
**These will apply only if you have ordered these options.**

**OPTIONAL FEATURE: CARESS™ SELF ADJUSTING FACE CRADLE**



The revolutionary Caress self-adjusting face cradle conforms to the unique shape and contour of each and every face. The Caress' patent pending Soft-Petals™ flex and balance to suspend a client's face in a cradle of comfort, while eliminating pressure points and reducing sinus pressure build-up. When combined with patent pending Form-fit™ memory cushion, the Caress molds itself perfectly to each and every face shape and size.



**OPERATIONAL INSTRUCTIONS:**

1. Release the cam lever on the right side of the platform to release the arms of the face cradle.
2. Insert the platform's arms through the outlet holes of your table and push the face cradle in until the frame of the face cradle touches the outlet holes.
3. With both hands, lift the platform of the head rest to the desired height and tilt angle. Lock the position in place by pushing the cam lever in until you feel it lock into position. Test to ensure that the Caress has locked into position by placing a modest amount of downward pressure (approximately 10 pounds / 4.5kg) on the face cradle. To avoid the risk of injury, do not adjust the face cradle angle while the client has his/her head on the unit.
4. Place the Form-fit memory cushion on the Caress platform, aligning the Velcro on the pad with the Velcro on the platform. Adjust the cushion as needed to accommodate different face shapes and sizes.

**STORAGE:** The quick release cam lever allows the face cradle to fold down compactly for easy storage. To prepare the Caress for storage, grab the locking lever firmly and flip it up to release the tension. Compress all sections of the platform into their most compact position. Lock cam lever back into place.

**CLEANING.** Clean with soap and water – no harsh chemicals.  
Avoid excessive heat.

**SAFETY PRECAUTIONS:**

- Do not sit on the face cradle.
- Do not use the face cradle if the platform appears damaged. Periodically inspect face cradle.
- The maximum load on the face cradle is 35 pounds.

**SAVE THESE INSTRUCTIONS**



**Section 2.A Continued**  
**OPERATING YOUR TABLE**  
**Pedi Lounger – Optional Features**  
**These will apply only if you have ordered these options.**

**OPTIONAL FEATURE: FLEXIBLE SIDE ARMS**



The optional flexible armrest on your Living Earth Crafts table features a positive lock design. A locking mechanism ensures that the armrests do not unexpectedly pull out during use. At first the armrests will be a bit tight to remove. This is normal. Allow time to let the components “fit in”, and they will loosen over time.

1. **Install the Flex Armrests.** Installing the armrests can be done with the table in any position; however, it may be easiest when the table top is in the flat position. Line up the entry posts with the side grommet holes. Push the tips into the holes until a click can be heard. If the armrest is pushed in too far, pull it back slightly and the lock will engage. Test the locked position by giving it a light pull. It should give resistance.
2. **Remove the Flex Armrests.** Removing the armrests can be done with the table in any position; however, it may be easiest when the table top is in the flat position. Grasp the armrest near the entry posts and remove one end at a time with a sharp pull. This operation takes some effort, however this ensures that the armrest will not release during use.

**SAFETY PRECAUTIONS:**

**Arms will flex with pressure.** Client should not use the Flexible Arm Rest as a support mechanism to enter or exit the table. Please note that weighted pressure on the armrest will cause them to invert and flex downward. This typically surprises the client and may cause them to stumble or fall. Please advise client not to use as a support mechanism. A suggested recommendation is to remove one of the Flexible Side Arms prior to entry/exit of the chair.

Excessive pressure on the Flexible side arms could cause damage or breakage of the device, and is not covered under warranty.

**SAVE THESE INSTRUCTIONS**



**Section 2.A Continued**  
**OPERATING YOUR TABLE**  
**Pedi Lounger – Optional Features**  
**These will apply only if you have ordered these options.**

**OPTIONAL FEATURE: PIVOT PERFECT™ SIDE ARMS**



Patent Pending Pivot Perfect™ Side Arms with or without Manicure Bowls

If you have ordered the optional Pivot Perfect Side Arms or Manicure Arms, it is important that you read this section.

1. **Close in fit.** Arms can be pivoted to rest close to the client's body for maximum comfort during manicure soaks or polish, or during facials and other treatments.
2. **Swing out for polish work.** Arms swing out towards technician to allow for easy filing or polish positioning.
3. **Access to Manicure Bowls.** Manicure bowls are covered with comfortable foam cushions that swing away for access to manicure bowls. With the cushions covering the soak bowls, the arms are a comfortable armrest. 2-part upholstery allows for pads to open up for soaking of nails, and to cover soak bowls for other treatments. Simply rotate the pad covers outward to open, and back inward to cover bowls. **Cleaning Soak Bowls:** Soak bowls are easily removed by pressing up from the underside of the bowl and removing from cut-out.
4. **Client entrance and exit from chair.** Arms can be rotated and swung behind the back rest for easy exit and entrance of chair. Arms are braced with solid steel and can be used as a support mechanism by client when entering or exiting chair.
5. **Removable.** The optional Pivot Perfect Armrest on your Living Earth Crafts table features a positive lock design which holds the arm firmly in place when in use. To remove, grasp the armrest near the entry posts and remove with a sharp pull.
6. **Self Adjusting.** Pivot Perfect Arms self adjust with the angle of the back tilt. They lay flush with the table top when in a flat massage position, and rise gradually with the angle of the back tilt.

**SAFETY PRECAUTIONS:** Be aware that when your Pivot Perfect Side Arms are swung in over the table top, you need to use caution when lifting the leg section to avoid pinching your client's body between the table top and the side arms. To avoid possible injury to your client and damage to your table, stop lifting the leg section before your client's body touches the bottom of the side arms. Similarly, avoid lifting the leg section into the bottom of the armrests as you may tear the vinyl.

When rotating your Pivot Armrests in, take precautions to avoid contact between the armrest and the leg section. The result of this collision could be injury to your client or damage to your table and arms. Stop rotating your side arms in before contact is made with your table.

**SAVE THESE INSTRUCTIONS**



LIVING EARTH CRAFTS®

Operation manual – Pedi Lounger, 08.20.10 V1

08/26/10

### Section 3

## MAINTENANCE

### Pedi Lounger

Your new Pedi Lounger is relatively maintenance free as the mechanical components are enclosed and sealed. However, to ensure that your table will continue to function properly and keep its appearance, we recommend the following:

1. **VINYL:** After each and every treatment on your table, clean thoroughly, removing all oil residue. This and other residues may cause the vinyl to dry out and become brittle. We recommend using the product ViraGuard® (sold by Living Earth Crafts) which also disinfects. Spray the vinyl and rub gently with a soft cloth. A solution of 1 part mild detergent (such as liquid dishwashing detergent) to 10 parts warm water may also be used. Simple Green is another alternative. A more thorough cleaning is recommended on a weekly basis.

Use caution when attempting to remove stains as you could damage your vinyl. Any stains should be treated immediately with a solution of 1 part alcohol to 10 parts water. Restore the luster to the spot with a light application of spray furniture wax.

#### **CAUTION!**

DO NOT USE ACETONE, PAINT THINNER, BLEACH,  
ARMOR ALL TYPE OR INDUSTRIAL CLEANERS.

These will damage the vinyl's protective coating.

2. To maintain the wood finish and retouch scratches, use a high quality furniture wax.
3. This furnishing has no user serviceable parts.
4. If this furnishing is taken out of service, the electrical cord needs to be rolled up and placed inside the table to avoid damage while in storage.
5. You should periodically check to make sure your table is level. The "level or balance" of your table is very important, both during the initial set up and on a routine basis. The balance of the table is adjusted with the leveling feet, located on the bottom of the base. You will need (2) open end wrenches – ½" and 9/16".

Begin by taking a visual inspection. Notice two hex nuts on each leveling foot. The upper hex nut is adjustable and secures the leveling foot in place, while the lower nut is stationary, and allows you to raise and lower each leveling foot independent of each other. This is necessary as floors and carpet may not be 100% level or flat. The most common symptom of an unbalanced table is unusual rocking of the entire bed. To determine which foot to adjust, attempt to "rock" your table. If your table rocks, the leg that is "off the ground" is the one that will need adjusting. Once your diagnosis has been made, proceed as follows:

- a. Loosen the upper hex nut.
- b. Raise or lower the entire foot as necessary on the lower hex nut. Counterclockwise will lower the overall height; clockwise will raise the overall height. Continue with the adjustment of the lower hex nut until the black round foot is completely flat to the ground and the table no longer rocks.
- c. To lock into place, reposition the upper hex nut so that is secure and tight against the upper leg.
- d. Test all legs to ensure that the upper hex nut is tight against the upper leg and secure in place.



## **Section 4**

### **TROUBLE SHOOTING**

#### **Pedi Lounger**

If you are experiencing technical difficulties with your Pedi Lounger, we ask that you perform these trouble shooting techniques prior to contacting Living Earth Crafts.

*SYMPTOM: Table top does not adjust.*

1. Check to make sure the outlet in your room is receiving power. This can be done by plugging in a hairdryer or small appliance and turning it on.
2. If you have a dimmer in the room, make sure the dimmer switch is turned to full power, then retest your table.
3. Check the fuse or circuit breaker box for blown fuse or tripped circuit breaker.

*SYMPTOM: PowerPort Management Outlet is not powered.*

1. Check to make sure the short cord is plugged into a power outlet.
2. Check to make sure the outlet in your room is receiving power. This can be done by plugging in a hairdryer or small appliance and turning it on.
3. If you have a dimmer in the room, make sure the dimmer switch is turned to full power, then retest your table.
4. Check the fuse or circuit breaker box for blown fuse or tripped circuit breaker.

If you are unable to resolve the problem with your table, please refer to Section 5, Technical Problems, and contact Living Earth Crafts.

**Section 5**  
**TECHNICAL PROBLEMS**  
**Pedi Lounger**

With proper maintenance, your Living Earth Crafts table is designed to give you years of trouble free operation. If you should have a problem with your table, do not attempt to repair the table yourself. This will void the 2-year warranty that covers your table against defects in material and workmanship. To maintain your warranty, you need to follow these steps:

1. Call **800-358-8292 or 760-597-2155**  
Our Customer Service Representative will ask you to provide the following information:
  - a) your table's serial number (located on the underside of the head section of the table top)
  - b) a description of the problem
2. Please remember that any unauthorized service will not be covered. Please be sure to contact us first.
3. As expressed in your warranty, damage from abuse or mishandling is not covered.

You will need to allow the technician access to your table at the scheduled time. If there is a lengthy delay, you will be charged for the delay time at the service agent's hourly rate. To cancel the appointment, notify the technician 24 hours prior to the scheduled appointment. If you fail to notify the technician, you will be charged for the service call.



## **Section 6** **WARRANTY** **Pedi Lounger**

Tables are warranted against defects in materials, design and workmanship, to the original owner, as follows:

### *Warranty*

#### **Lifetime Limited Warranty**

Living Earth Crafts (LEC) guarantees their stationary, hydraulic, electric lift and portable tables against defects in material and workmanship for as long as the original purchaser owns the table, or five years after the model is discontinued. The foam and vinyl are warranted for three years from the date of purchase. Hydraulic systems, motors, controls, actuators, and electronics are warranted for two years. Costs associated with maintenance procedures and lubrication are not covered under this warranty. See User's Guide for details on the proper care and handling of the equipment. This warranty does not cover damage caused by accident, misuse, improper maintenance or neglect. All other accessories and options are warranted for one year against defects in materials and workmanship, unless otherwise noted. All warranties are limited to repair or replacement, at LEC's discretion, unless otherwise stated.

#### **Insured Delivery**

Your Living Earth Crafts table is carefully inspected and packaged in protective materials and insured against damage during shipment. To ensure full coverage, please inspect all tables for freight damage at time of delivery and note any damage on acceptance form. Notify Living Earth Crafts immediately for claim processing.

#### **To Obtain Warranty Service**

If warranty service is needed, please call Living Earth Craft's toll free number 800-358-8292 with proof of purchase and the product serial number to arrange for service. Warranty for stationary tables is on-site, where feasible, at Living Earth Crafts' sole discretion. For portable tables and factory repairs, the customer is responsible for shipping costs associated with returning the product to the factory. Living Earth Crafts will return the warranted product, standard shipping pre-paid, to customers in the continental US. International customers are responsible for any applicable duties and taxes as well as all shipping charges (inbound and outbound).

- Warranty is onsite where available.
- Warranty does not cover damage caused by accident, misuse, or neglect. All warranties limited to repair or replacement, at our discretion, to the original purchaser.
- Lifetime warranty applies to original owner, as long as you own your table or 5 years after the model is discontinued or five years for private label tables



**Section 7**  
**SPECIFICATIONS**  
**Pedi Lounger**

**Key Features**

- Fully articulating electric salon top
- Ergonomic hand control
- Strata Plug Cushioning System
- Articulates to sitting position with nearly 90 degree back tilt
- Articulates to zero gravity relaxation position
- Articulates to flat position
- Salon style neck roll

**Specifications**

- Width: 27 inches
- Length: 70 inches
- Set height: 24 inches
- Upright dimensions: 27”w x 35” l
- Weight capacity: 600 lbs
- UL Pending
- CE Mark
- Limited lifetime warranty

Offer pedicures, manicures, facials, medi-spa treatments. Additional options and accessories may be required for these treatments.

**ELECTRICAL DATA –**

Power Cord	Non-grounded, polarized, double insulated
Input Voltage / Amp.	120VAC ~ , 60 Hz, 2.7 A max.
Input Amperage Rating	Max. 12A
Duty Cycle	10%, Max. 2 min./18 min.
OUTLET STRIP	Rated 12A - 125VAC - 60 Hz

